



# Hydraulic Post Driver



Pneumatic • Hydraulic • Gasoline  
Professional Grade Tools

The Rhino® HPD 60 is a high-performance hydraulic post driver perfect for fencing, road signs, farm, ranch, forestry, vineyards, guardrail, anchors, tent stakes - essentially any heavy duty driving job. Activate with the easily accessible built-in trigger or for taller applications utilize the optional remote valve. Continuous component lubrication keeps maintenance at a minimum and extends tool life.

Specifications	
Weight, lbs	60.5
Length (w/o Chuck) inches	26
Oil flow, gpm	8
Working pressure, psi	1750
Max. return pressure, psi	220
Blow frequency, bpm	1380
Blow energy, ft/lbs	70
Vibration level (3 axis) m/s <sup>2</sup>	<9.6
Post size max. dia. inches	3 7/8
Standard Equipment	
Part No.	801010
Equipped with: - 1 set of 12" x1/2" Hydraulic Whip Hoses with flat face Quick Couplings 3 7/8" (98.4 mm) I.D. Master Chuck*	
Part No.	801013
Equipped with: - 1 set of 12" x1/2" Hydraulic Whip Hoses with flat face Quick Couplings 2 1/2" Chuck- Loc™ w/Locking Nut System*	
Optional Accessories	Part No.
HPP 13 Flex Power Pack	801213
HPP 18V Flex Power Pack	801214
Oil Flow Divider**	801005
Remote Valve with 6" Whip Hose and 6' Hose	801011
Extension Hose (20')	801226
Extension Hose (30')	801227

**\*HPD 60 comes standard as part number 801010 OR 801013 NOT BOTH.**

**\*\* For use with other power sources, skid steer/mini excavator, not necessary if using our power packs.**



A Tradition of Quality and Service Since 1975

Visit [rhinotool.com/dealer-locator](http://rhinotool.com/dealer-locator) to find your nearest Rhino® dealer.

[www.rhinotool.com](http://www.rhinotool.com)

866-707-1808

## Hydraulic Post Driver


Pneumatic • Hydraulic • Gasoline  
Professional Grade Tools

### Order Information and Accessories

Part No.	Description
	PLEASE NOTE
801016	HPD Master Chuck is required with the following chuck adapters
070609	3 1/2" (88.9 mm) Chuck Adapter
070610	3" (76.2 mm) Chuck Adapter
070611	2 1/2" (63.5 mm) Chuck Adapter
070612	2" (50.8 mm) Chuck Adapter
070613	1 1/2" (38.1 mm) Chuck Adapter
070614	1" (25.4 mm) Chuck Adapter
070617	1-1 1/2 lbs/ft Channel Post Chuck Adapter
070618	2-2 3/4 lbs/ft Channel Post Chuck Adapter
070619	3-4 lbs/ft Channel Post Chuck Adapter
070615	2" (50.8 mm) Heavy Chuck Adapter
	PLEASE NOTE
	Drive Caps are necessary to minimize damage to posts being driven.
071260	2" Drive Cap for Schedule 40 Pipe w/T-Bar and Clip
071261	2 1/2" Drive Cap for Schedule 40 Pipe w/T-Bar and Clip
071262	3" Drive Cap for Schedule 40 Pipe w/T-Bar and Clip
	PLEASE NOTE
801016	HPD Master Chuck is also required with the following Break-Away Systems and will also require a chuck adapter and a drive cap
070832	Chuck Adapter for the Channel Post Break-Away Anchor System
070836	Drive Cap for the Channel Post Break-Away Anchor System
071014	Chuck Adapter for the Square Tube Break-Away Anchor System
071004	1 1/4" Drive Cap for the Square Tube Break-Away Anchor System
071005	1 1/2" Drive Cap for the Square Tube Break-Away Anchor System
071006	1 3/4" Drive Cap for the Square Tube Break-Away Anchor System
071007	2" Drive Cap for the Square Tube Break-Away Anchor System
071008	2 1/4" Drive Cap for the Square Tube Break-Away Anchor System
071009	2 1/2" Drive Cap for the Square Tube Break-Away Anchor System
Custom	4 1/4" Round Master Chuck
Custom	4 1/16" x 4 1/16" Square Master Chuck
801018	2 1/2" Chuck-Loc™ w/Locking Nut System as used on Rhino Gas Drivers
	PLEASE NOTE
	The following adapters can only be used with the Chuck-Loc™ System
300900	1" Chuck-Loc™ Adapter
300895	1 3/4" Chuck-Loc™ Adapter
300902	2" Chuck-Loc™ Adapter



Use of optional remote valve (801011) with HPD 60.

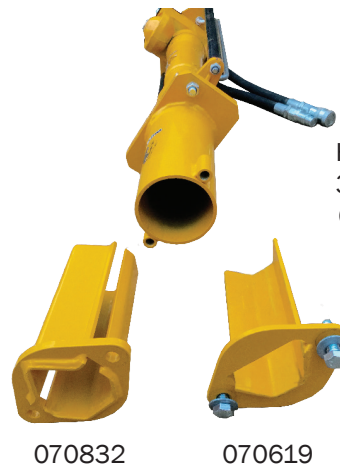

HPD 60 with  
3 7/8" Master  
Chuck 801010

070832

070619



Drive Caps needed  
to minimize damage



A Tradition of Quality and Service Since 1975

Visit [rhinotool.com/dealer-locator](http://rhinotool.com/dealer-locator) to find your nearest Rhino® dealer.

[www.rhinotool.com](http://www.rhinotool.com)

866-707-1808